Passenger's Under-dash Fuse/Relay Box

– Fuse-to-Components Index

Front View

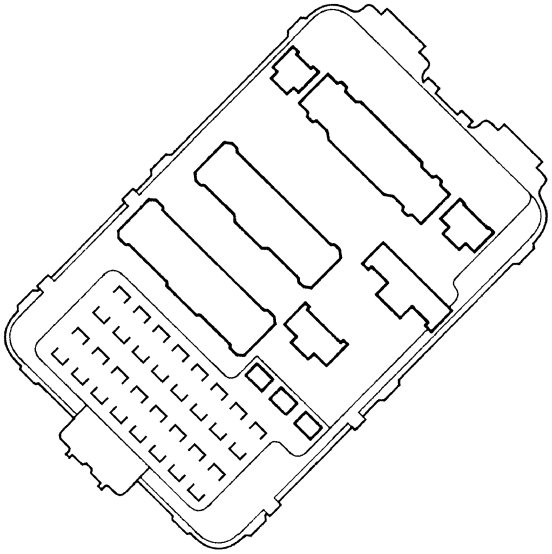

Rear View

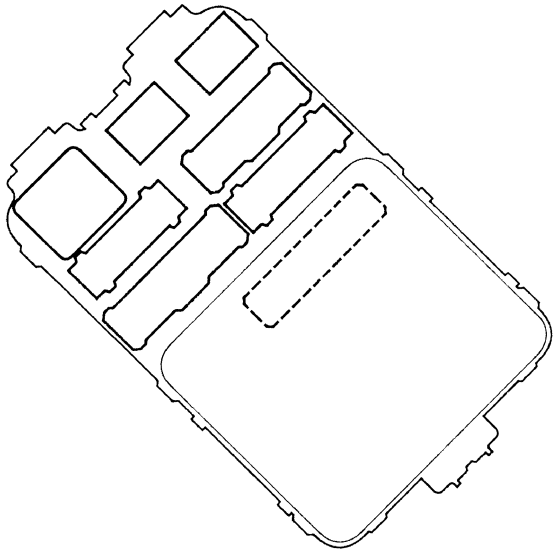

Fuse Number	Fuse Name	Amps	Page	Component or Circuit Protected
1	(SUN ROOF MOTOR)	30	10-10	Moonroof
2	(POWER SEAT REC)	20	10-10	Power seat up-down motor (2-way adjustable), Power seat rear up-down and recline motors (8-way adjustable)
3	(POWER SEAT SLIDE)	20	10-10	Power seat slide motor (4-way adjustable)
4	(POWER SEAT SLIDE)	20	10-10	Power seat front up-down and slide motors (8-way adjustable)
5	(POWER SEAT REC)	20	10-10	Power seat recline motor (4-way adjustable)
6	DAY LIGHT (Canada) or (LAF HEATER) (ULEV)	10 (Canada) 20 (ULEV)	10-10	DRL control unit (Canada), Primary HO2S relay (ULEV)
7	(P/W REAR L) (COUPE) (SUNROOF RELAY) (SEDAN)	20	10-13	Left rear window motor, Moonroof open and close relays
8	(P/W FRONT R)	20	10-13	Front passenger's window motor
9	RADIO CIGARETTE LIGHTER	20	10-10	Accessory power socket, Audio unit

©2002 American Honda Motor Co., Inc.

Passenger's Under-dash Fuse/Relay Box

– Fuse-to-Components Index

Front View

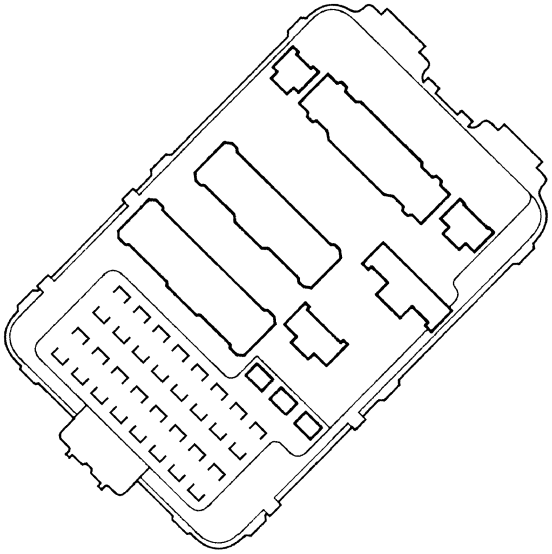

Rear View

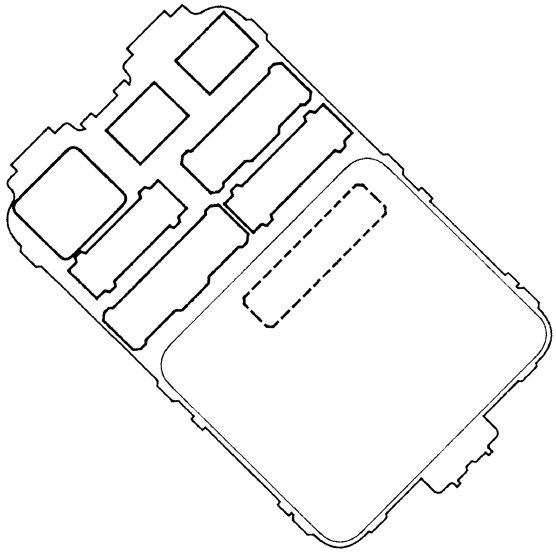

Fuse Number	Fuse Name	Amps	Page	Component or Circuit Protected
10	SMALL LIGHT LICENSE LIGHT	10	10-11	Dash and console lights, Driver's multiplex control unit, Front parking lights, Front side marker lights, Glove box light, License plate light, Taillights, Vanity mirror lights
11	INTERIOR LIGHT COURTESY LIGHT	7.5	10-11	Ceiling light, Door courtesy lights, Spotlights, Trunk light
12	(POWER DOOR LOCK)	20	10-12	Passenger's multiplex control unit
13	CLOCK BACK UP	7.5	10-12	Climate control unit (w/auto A/C), Clock, Door multiplex control unit, Driver's multiplex control unit, Gauge assembly, Heater control panel (w/manual A/C), Passenger's multiplex control unit, PCM or ECM, Security indicator (EX)
14	(ABS MTR CHK)	7.5	10-13	ABS control unit (All except '01-'02 V6)
14	(ABS MTR CHK)	7.5	10-13	ABS/TCS control unit ('01-'02 V6)
15	(P/W FRONT L)	20	10-13	Door multiplex control unit
16	(P/W REAR R)	20	10-13	Right rear window motor

©2002 American Honda Motor Co., Inc.